
4. Gasoline and Lubricating Oil The new oil injection system precludes necessity of

pre-mixing gasoline and oil.

However we recommend the following fuel mixtures and oil:

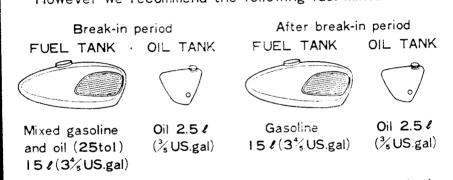

It is only necessary to check the oil level through the peephole in the oil tank.

If the level has dropped below level, fill up with 2 litres (%US.gal).